

This method allows the button on the right to activate the Joystick 2 UP and Down Inputs simultaneously.

The button can then be used for "Pause" and "Escape" by configuring the application to recognize the simultaneous activation of these inputs.

